





APPLICATION METHOD:

The anchor bracket is used as a fixator of the pipe for the warm floor along the entire length of the horizontal sections, and especially in the places of its bends and turns.

Art.	Name	Pipe diameter, mm	Packaging, pcs.
0101030311	Anchor bracket Premium	16/20	1000
0101030341	Anchor bracket Classic	16/20	5000
0101030321	Anchor bracket for tucker (mounting gun)	16/20	525